




Care@Home™

Control Panel Getting Started





The Best Location for the Control Panel

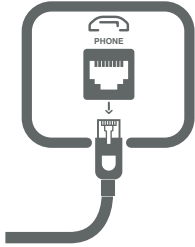

Near a phone jack
(PSTN version only)



Good cellular reception
(Cellular version only)



Convenient for
resident to access



Where speakerphone can be
heard throughout premises



Control Panel

At least 2 m (6 ft.)
from other devices



Motion detector



Setting Up the Control Panel

1

Push here

2

Lift the cover off

4

Insert the backup battery

3

Insert the SIM

Cellular version only

7

Turn the power switch on

5



Take the cable out of the existing phone, and connect it to the LINE IN socket



Use the new cable from the kit to connect the phone to the TO PHONE socket

PSTN version only

6

Connect the power cable and plug into a power source. Then close the back cover



Using the Control Panel



Press to cancel an emergency call



Press to start an emergency call.
Red light:

- Blinking: alarm in progress
- On: message acknowledged



Shows power status

- On: AC power connected
- Blinking: using battery
- Off: no power



Shows communication status

- **Green:** if on, ready for call. If blinking, message being sent
- **Red:** if on, communication failure
- **Orange:** active conversation



Shows problem status

- On: malfunction in the control panel or a peripheral
- Blinking: supervision lost, or low battery in a peripheral

For more information, see: <http://www.essence-grp.com/resources/smart-care-download.html>

Legal notice: http://www.essence-grp.com/html/concerning_documents.html

www.essence-grp.com • info@essence-grp.com

